

## UNIVERSAL GAS VALVES

# C6097A

## GAS PRESSURE SWITCHES

### INSTRUCTION SHEET



Table 2. C6097A stand alone models

Model	Operating pressure range (mbar)	Nominal operating differential (mbar)	Maximum working pressure (mbar)
C6097A2110	1.0 ... 10	0.4	200
C6097A2210	2.5 ... 50	0.6	300
C6097A2310	30 ... 150	2.8	500
C6097A2410	100 ... 500	7.0	600

NOTE: The operating differential is the difference between the upper and lower operating pressures at one set point.

#### Dimensions

See Figure 1.

#### Connection

Inlet positive pressure Rp1/4" internal pipe thread (2 x).  
Differential pressure Rp 1/8" internal pipe thread.  
All connections according to ISO 7-1

#### Set point accuracy

15% of the full scale (when pressure is increased)

NOTE: The knob readings are approximations of the actual settings.

#### Torsion and bending stress

Pipe connections meet group 2, according to EN161 requirements.

#### Contact ratings

Resistive load: 250 Vac, 5A  
Inductive load: 250 Vac, 3A (power factor 0.6)  
Minimum contact current and voltage: 50 mA, 24 Vac

#### Material of pressure receiving parts

NBR single diaphragm

#### Material of housing

Aluminium die-cast

#### Material of case

Polybutylene terephthalate

#### Material of cover

Polycarbonate

#### Ambient temperature range

-15 ... 60 C

Relative humidity: max. 90% at 40 C (non-condensing)

#### Sensed medium temperature range

-15 ... 80 C

#### Electrical connection

Plug connection according to PG11 or three pin plug connector ("DIN plug")

Protection against electrical shock: class I

#### Wire connection terminals

M3.5 screw terminals, including earth connection

## APPLICATION

The gas pressure switch C6097A is used to detect the pressure of city gas, natural gas, LP gas or air etc.

When the gas pressure changes, the diaphragm of the pressure receiving part detects it and operates the (SPDT) switch to ON/OFF control of the external electrical circuit.

These switches are widely used to detect the upper limit or lower limit pressure of gas or air to be supplied to a gas burner, or to detect the clogging of the interlock filter of a burner blower.

## SPECIFICATIONS

#### Product range

There are two versions available: stand alone and flange mounted, see table 1. and 2.

Table 1. C6097A flanged mounted models

Model	Operating pressure range (mbar)	Nominal operating differential (mbar)	Maximum working pressure (mbar)
C6097A2200	2.5 ... 50	0.6	300
C6097A2300	30 ... 150	2.8	500
C6097A2400	100 ... 500	7.0	600

**Enclosure**

IP54

**Seals and gaskets**

Hydrocarbon resistant NBR rubber type

**Standards and Approvals**


The C6097A pressure switch conforms with the following EC directives:

- Gas Appliance Directive (90/396/EEC)  
PIN: CE-0063AR1571
- Low Voltage Directive (73/23/EEC)
- Electro Magnetic Compatibility Directive (89/336/EEC)


**INSTALLATION**

1. Read these instructions carefully. Failure to follow the instructions could damage the product or cause a hazardous condition.
2. Check the ratings given in the instructions and on the product to make sure the product is suitable for your application.
3. The installation has to be carried out by qualified personnel only.
4. Carry out a thorough checkout when installation is completed.
5. Electrical installation must be in accordance with local requirements.

**Stand alone models**

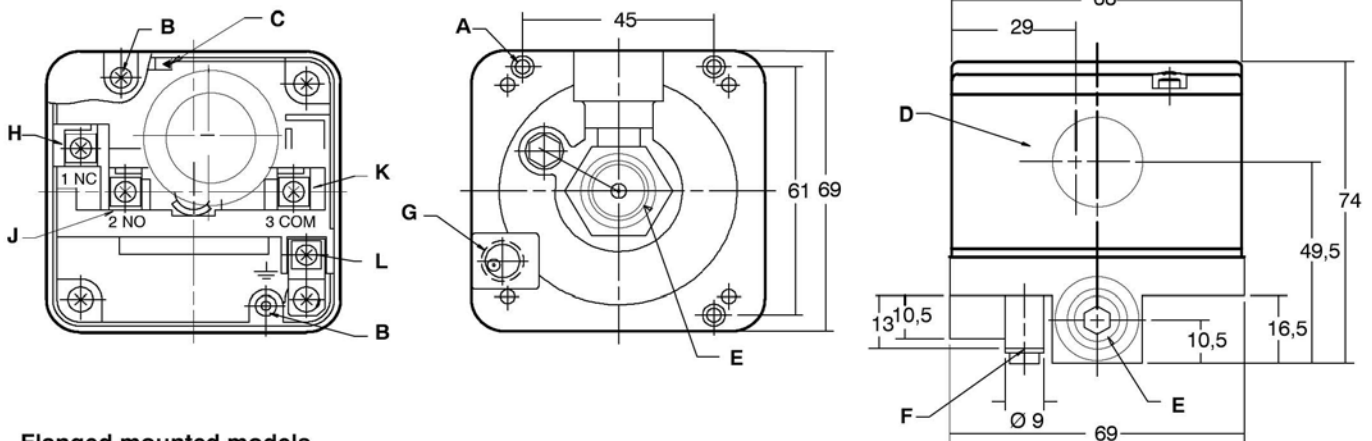

**Flanged mounted models**

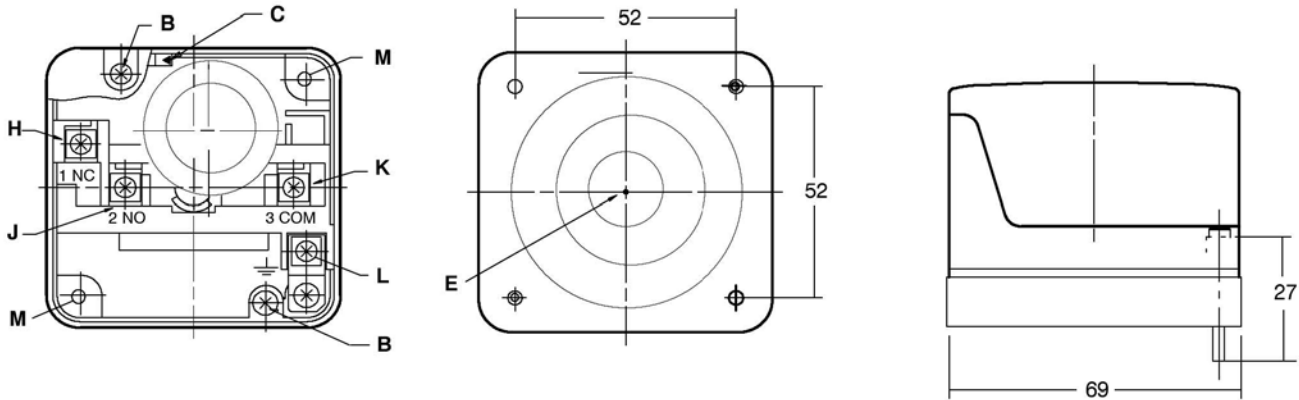

- A Bracket mounting hole (3), M4 tapping, depth 5 mm
- B Cover screw
- C Dial indicator
- D Conduit hole 22 mm (for plug connection PG11) or, three pin (DIN) plug connection
- E Inlet positive pressure (Rp 1/4")
- F Pressure test nipple (Ø 9)
- G Differential pressure (Rp 1/8")
- H } wire connection terminal
- J } wire connection terminal
- K } wire connection terminal
- L Earth connection terminal
- M Mounting screw holes (2 x 4.5 mm) for flanged versions

**Fig. 1. Installation drawing C6097A gas pressure switch**

### Mounting and orientation

In vertical, or horizontal plane with the setting dial facing upwards. Make sure that dirt or humidity does not get into the connection open for ventilation (G in Figure. 1.).



## WARNING

- Turn off gas supply before installation.
- Disconnect power supply to the pressure switch before beginning the installation to prevent electrical shock and damage to the equipment.
- Do not remove the seal over the pressure inlets, until ready to connect piping.

### Connecting positive pressure inlet (stand alone)

1. Take care that dirt does not enter the pressure switch during handling.
2. Remove the dust seal from the positive pressure inlet.
3. Apply a moderate amount of good quality compound to the pipe for fitting only, leaving the end thread bare, PTFE tape may be used as an alternative.
4. Use a sound taper fitting with thread according to ISO 7-1 (BS21, DIN 2999) or new, properly reamed pipe, free from swarf.
5. Screw the pressure switch onto the pipe, using the wrench boss incorporated in the housing.
6. Complete the electrical connections as instructed in the Electrical connections section.

### Connecting positive pressure inlet (flange mounted)

1. Take care that dirt does not enter the pressure switch during handling.
2. Remove the dust seal from the positive pressure inlet.
3. Place the O-ring. If necessary grease it slightly to keep it in place.
4. Mount the pressure switch on the valve body and screw it tightly with the two M4 mounting screws.
5. Complete the electrical connections as instructed in the Electrical connections section.

### Electrical connection



## WARNING

- Switch off power supply before making electrical connections.
- Take care that the wiring is in accordance with local regulations.

Use lead wire that can withstand 105 °C ambient.

The electrical ON/OFF operator is provided with a terminal block for electrical connections.

#### Wiring

Follow the instructions supplied by the appliance manufacturer. Refer to Figure 2. and 3. Connection diagram C6097A.

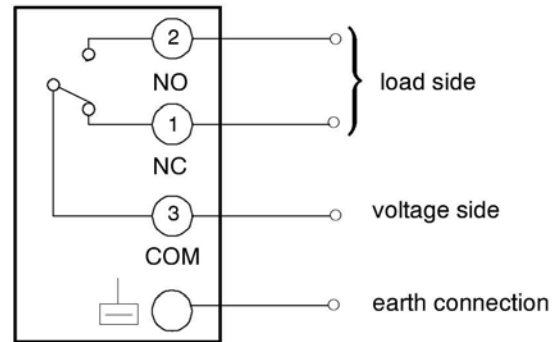


Fig. 2. C6097A connection diagram

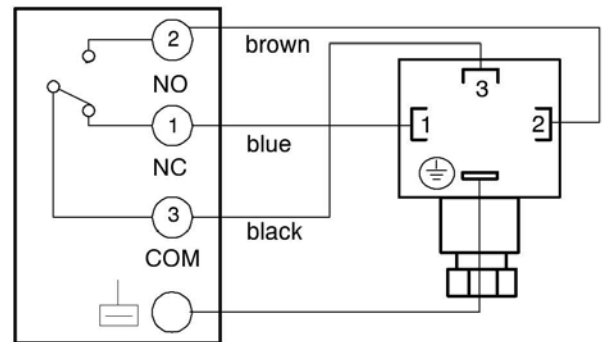


Fig. 3. C6097A connection diagram with DIN plug

#### Working principle

On pressure rise, terminals between COM and NO are closed.  
On pressure fall, terminals between COM and NC are closed.



## WARNING

#### Tightness test after installation

- Spray a moderate amount of good quality leak detection spray on all pipe connections.
- Start the application and check for bubbles. If a leak is detected in a pipe connection, remake the joint.

## ADJUSTMENT AND CHECKOUT



## WARNING

- The adjustment and checkout has to be carried out by qualified personnel only.
- Terminals are accessible, no protection against electrical shock.

### Pressure set point adjustment

(tolerance  $\pm 15\%$  over total scale)

NOTE: The knob readings are approximations of the actual settings.

1. Remove the cover of the pressure switch.
2. Turn the dial clockwise to increase or counter-clockwise to decrease the pressure set point.
3. Replace the cover.

---

## **Accurate pressure set point adjustment (stand alone only)**

**(tolerance < 3% over total scale)**

1. Remove the screw from the test nipple inlet.
2. Connect the tube of the pressure measurement device to the nipple (Fig. 1. F).
3. Remove the cover of the pressure switch.
4. Slowly release pressure of the main gas supply line until the desired value is reached.
5. Turn dial slowly until contact 1-3 opens and contact 2-3 closes.
6. Replace the cover.
7. Disconnect the pressure measurement device and replace the screw.

## **Checkout**

### **Checking cut-off pressure**

After the installation is completed, continue with the following procedures:

1. Slowly close manual main valve with the burner in operation. Shut down should occur when the pressure drops below the set point and the alarm (if connected) should be energized.
2. Re open the manual main valve. The pressure should rise and exceed the set point value, the burner should start up and the alarm turn off after the reset button is depressed.

# Sales Affiliates ECC OEM Europe

## A | Netherlands, Belgium, Luxembourg, Scandinavia

Honeywell B.V.  
Laarderhoogtweg 18-20  
1101 EA Amsterdam Z.O.  
NETHERLANDS  
Ph.: (+31) 2 05 65 69 11  
Fax: (+31) 2 05 65 66 00  
info@honeywell.nl  
www.honeywell.nl

## B | United Kingdom

Honeywell Control System Ltd.  
Unit 2 President Buildings,  
Savile Street East  
S Yorks S4 7UQ  
Sheffield  
UNITED KINGDOM  
Ph.: (+44) 114 286 0920  
www.honeywell.com/sites/uk

## C | France

Honeywell SA  
Parc Technologique de St. Aubin  
Bâtiment Mercury BP87  
91193 Gif-Sur-Yvette Cedex  
FRANCE  
Ph.: (+33) 1 60 19 80 00  
Fax: (+33) 1 60 19 81 81  
www.honeywell.fr

## D | Spain - Portugal

Honeywell S.A.  
Josefa Valcárcel 14  
28027 Madrid  
SPAIN  
Ph.: (+34) 9 13 13 61 00  
Fax: (+34) 9 13 13 61 27  
www.honeywell.es

## E | Germany, Austria, Switzerland, Liechtenstein

Honeywell GmbH  
Hardhofweg  
74821 Mosbach  
GERMANY  
Ph.: (+49) 6261 - 81 - 0  
Fax: (+49) 6261 - 81 461  
www.honeywell.de

## F | Italy

Honeywell srl  
Via Philips n.12  
20052 Monza  
ITALY  
Ph.: (+39) 0 39 21 65 1  
Fax: (+39) 0 39 21 65 402  
www.honeywell.it

## G | Slovakia

Honeywell s.r.o.  
Mlynske Nivy 71  
PO Box 75  
82007 Bratislava 27  
SLOVAKIA  
Ph: (421) 2 322 622 11  
Fax: (+421) 2 322 622 55 (54)  
http://www.honeywell.sk

## H | Czech Republic


Honeywell spol. s.r.o.  
V parku 2326/18  
14800 Prague  
CZECH REPUBLIC  
Ph: (+420) 242 442 111 (255)  
Fax: (+420) 242 442 181  
www.honeywell.cz

## I | Hungary

Honeywell Kft.  
Petnehazy U. 2-4  
1139 Budapest  
HUNGARY  
Ph: (+36) 1 451 4300 (46)  
Fax: (+36) 1 451 4343  
www.honeywell.hu

## J | Poland

Honeywell Sp.z.o.o.  
Domaniewska 39b  
02672 Warsaw  
POLAND  
Ph: (+48) 22 60 60900 (50)  
Fax: (+48) 22 60 60983  
www.honeywell.com.pl

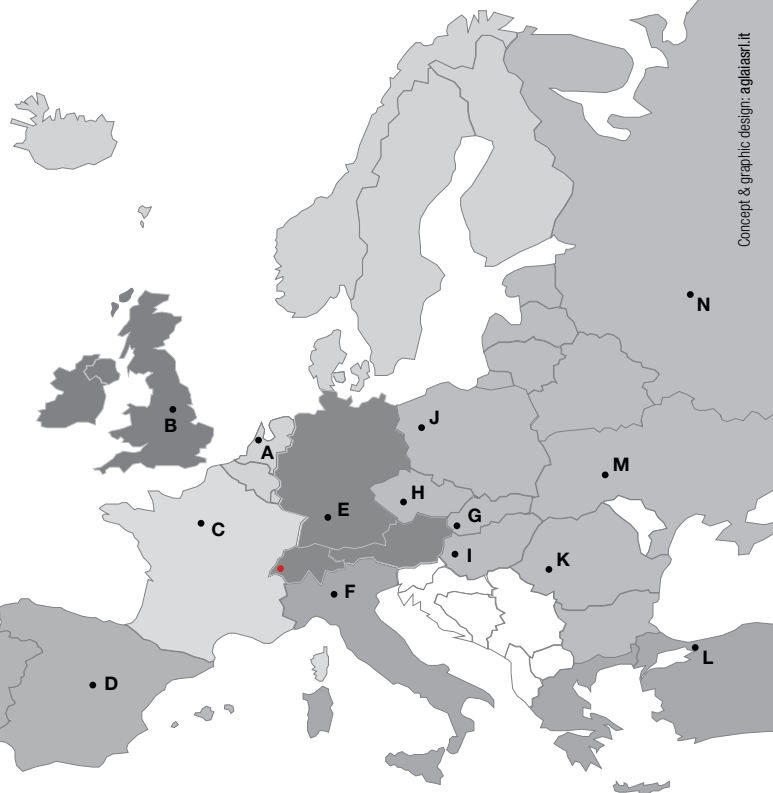

## K | Romania

Honeywell Romania SRL  
Calea Floreasca 169A  
014462 Bucharest  
ROMANIA  
Ph: (+40) 312 24 3000 (3)  
Fax: (+40) 212 31 6439  
www.honeywell.ro

## L | Turkey


Honeywell A.S.  
Cayiriyolu Sok. No:7  
Ucgen Plaza, Kat:7  
Icerenkoy 34752 Istanbul  
TURKEY  
Ph.: (+90) 216 578 7120  
Fax: (+90) 216 575 6637  
www.honeywell.com.tr

## M | Ukraine

IP Honeywell Ukraine  
Silver Centre  
4, Ivana Lepshe ave.  
03680 Kiev  
UKRAINE  
Ph: +(380) 44 351-15-50 (52)  
Fax: +(380) 44 351-15-51 (53)  
www51.honeywell.com/ru

## N | Russia

ZAO Honeywell  
Luzhniki 24  
119048 Moscow  
RUSSIA  
Ph: (+7) 495 796 9800 (35)  
Fax: (+7) 495 796 9894 (797 9370)  
www51.honeywell.com/ru

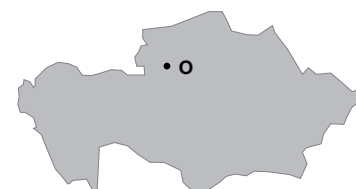

## O | Kazakhstan

Honeywell Automation Controls  
42, Timiryazev Str.  
050057 Almaty  
KAZAKHSTAN  
Ph: (+7) 727 2747 747  
Fax: (+7) 727 2752 252  
www51.honeywell.com/ru

● Honeywell Technologies SárI  
ACS – ECC EMEA  
Z.A. La Piece 16  
CH-1180 Rolle  
Switzerland  
Ph.: (+41) 21 695 3000  
Fax: (+41) 21 695 3030  
http://ecc.emea.honeywell.com  
www.honeywell.com

**Honeywell**  
Combustion Controls EMEA